


The LED display on the PDI will show:

- Voltage of each monitored phase
- Voltage sag or complete power loss on monitored phase(s)
- Transient spike or surge on monitored phase(s)
- Number of half cycle voltage loss, up to 10 half cycles

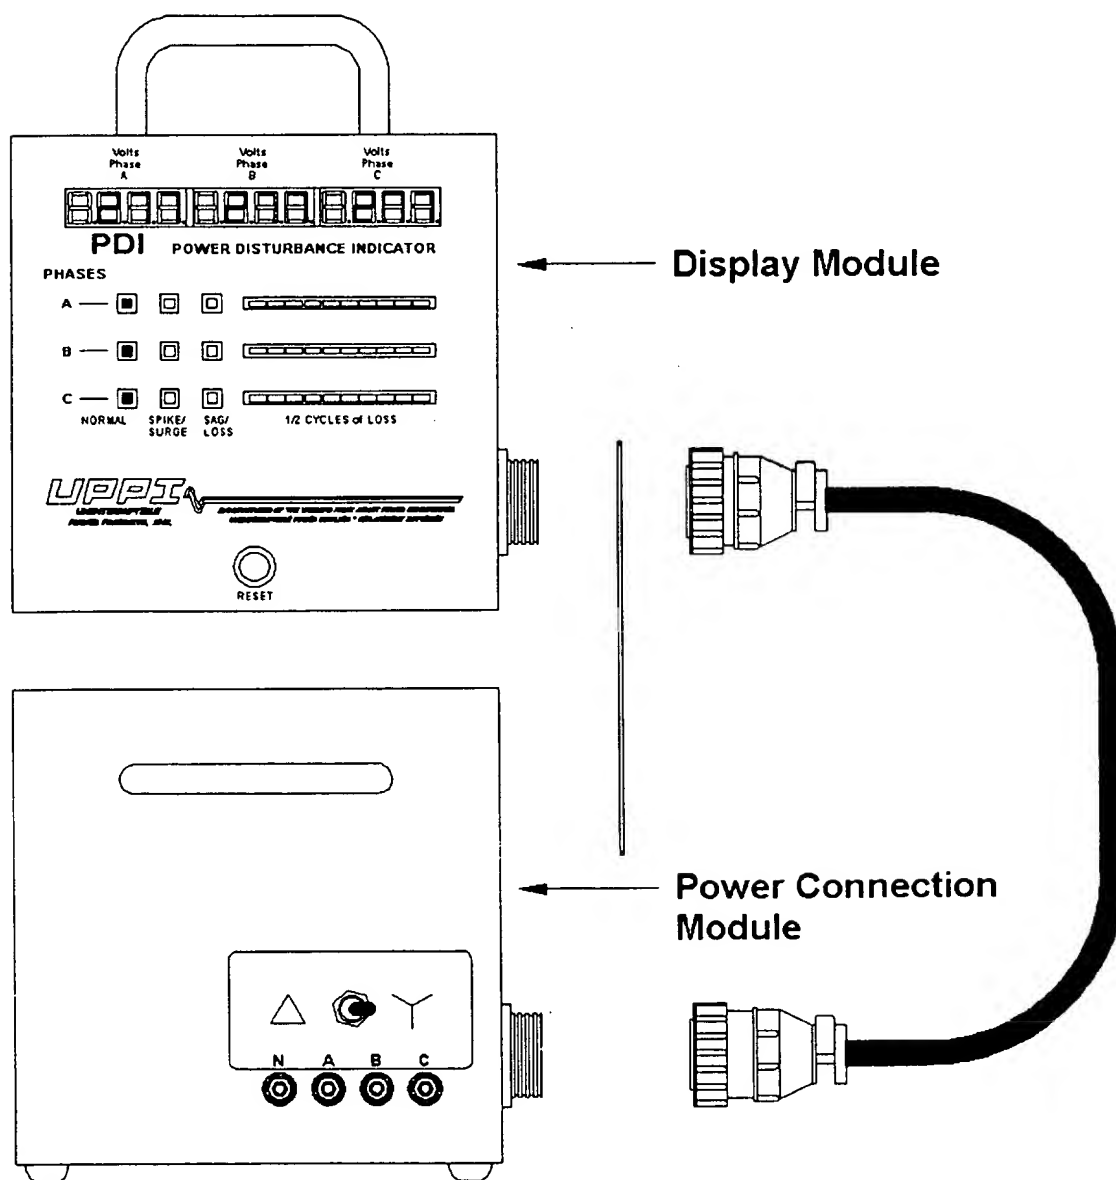


## 101 PDI - front view




- Voltage of each monitored phase
- Voltage sag or complete power loss on monitored phase(s)
- Transient spike or surge on monitored phase(s)
- Number of half cycle voltage loss, up to 10 half cycles





## 1 PDI - front view

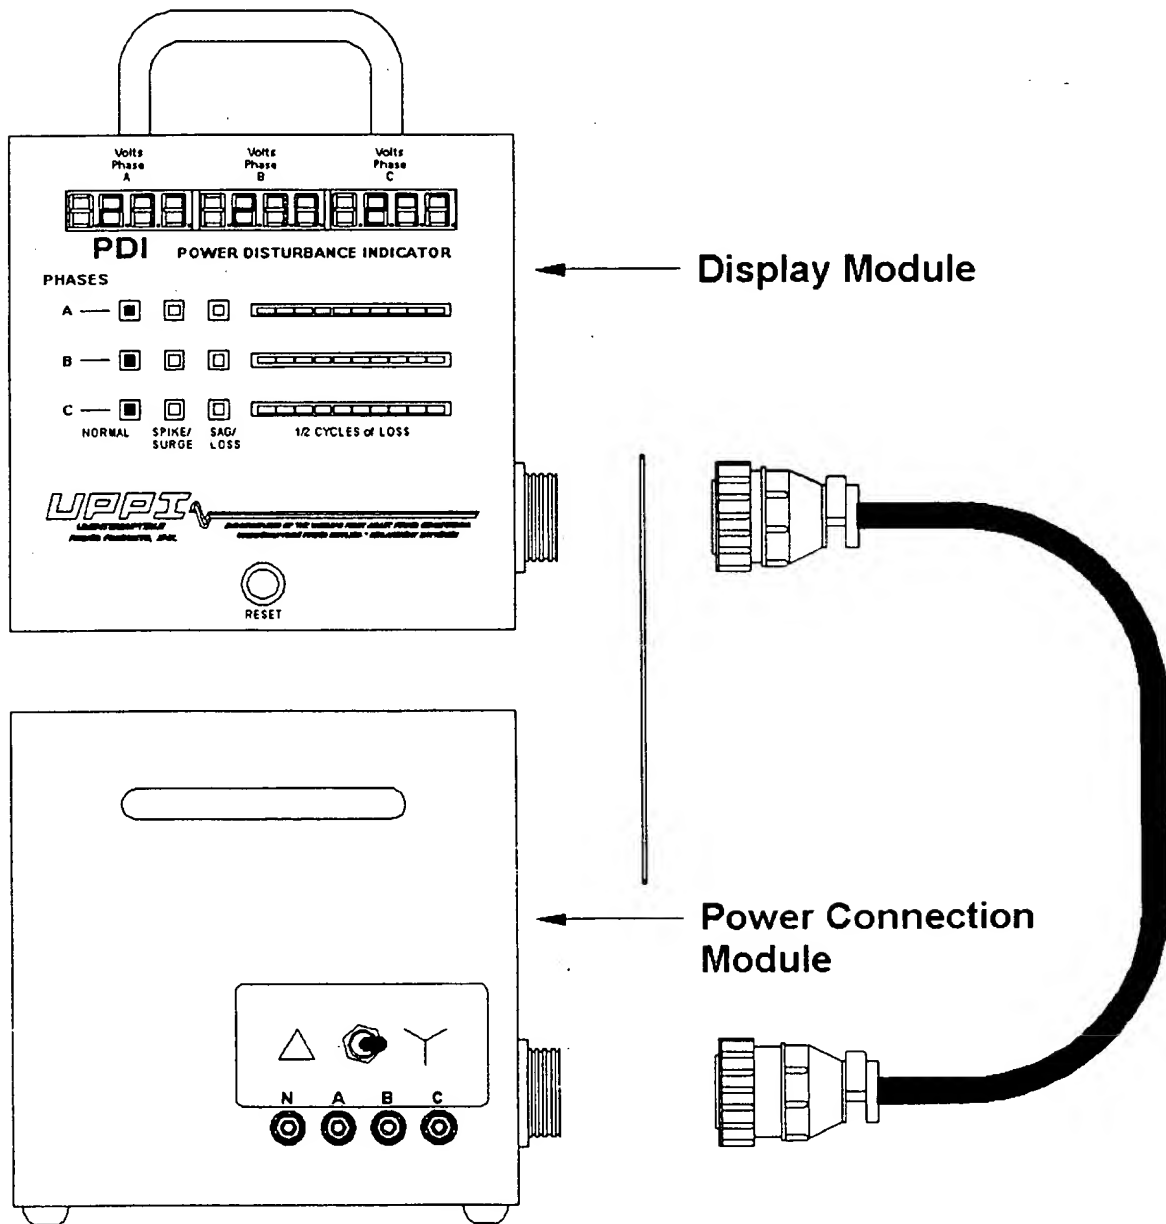

Page from owner's manual

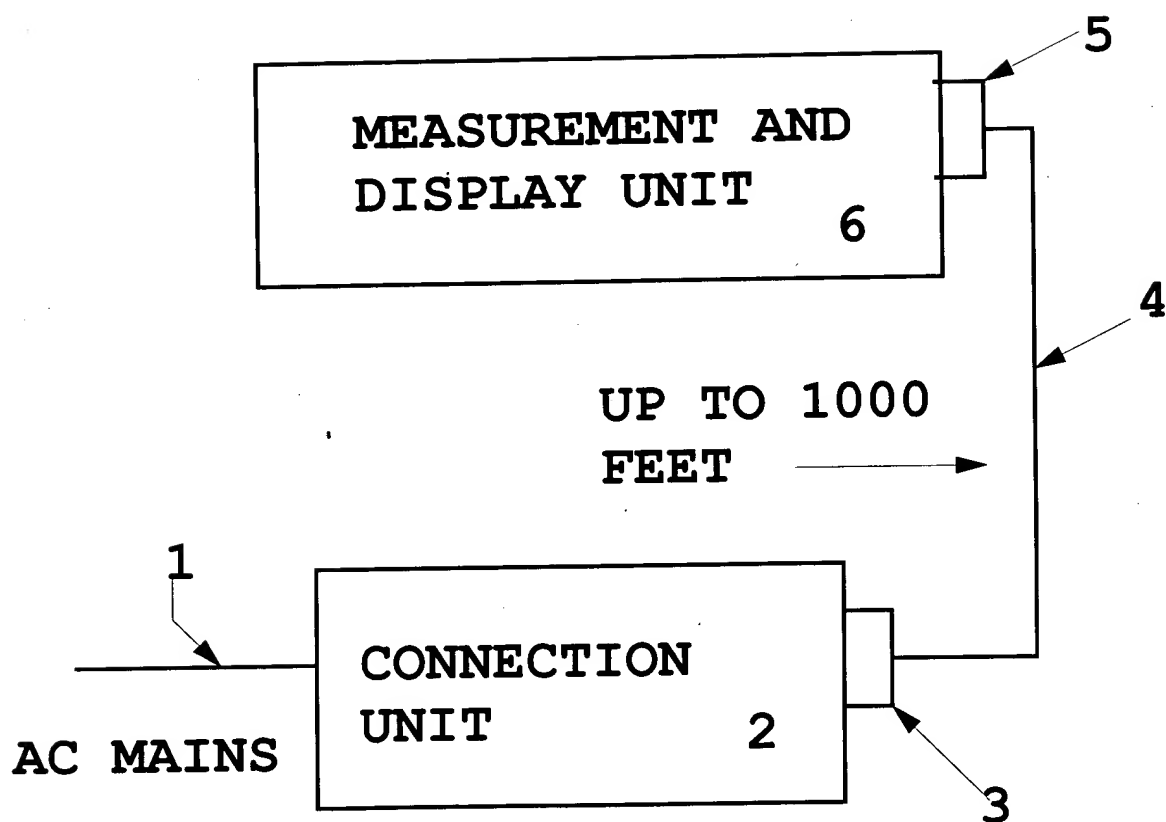

**FIGURE 1**

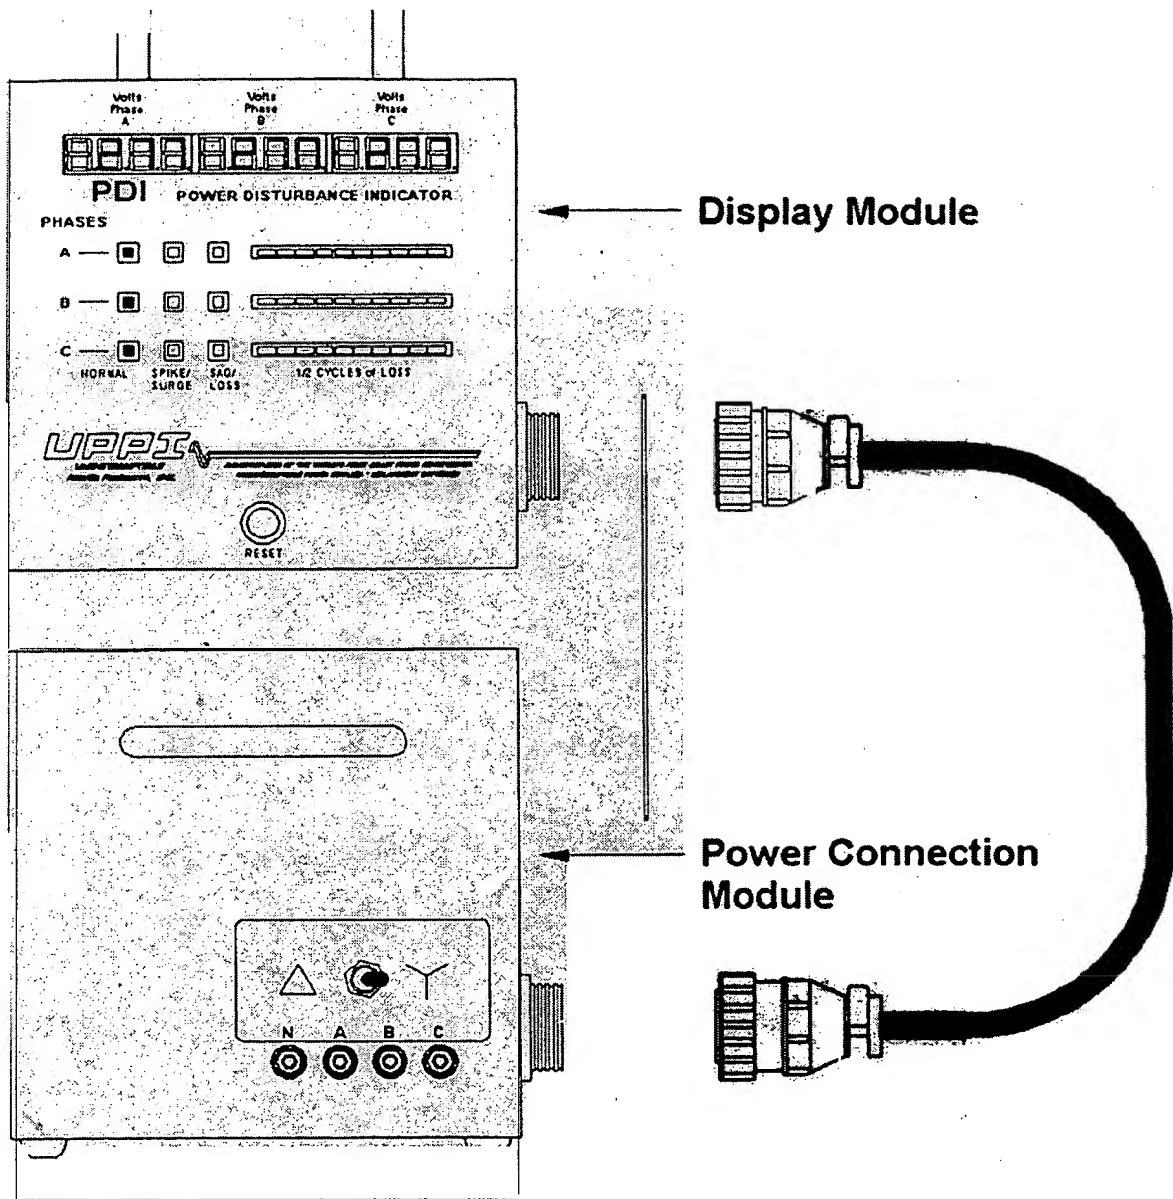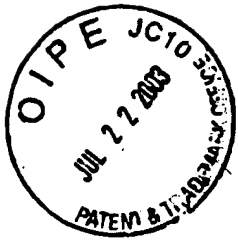

**FIGURE 7**

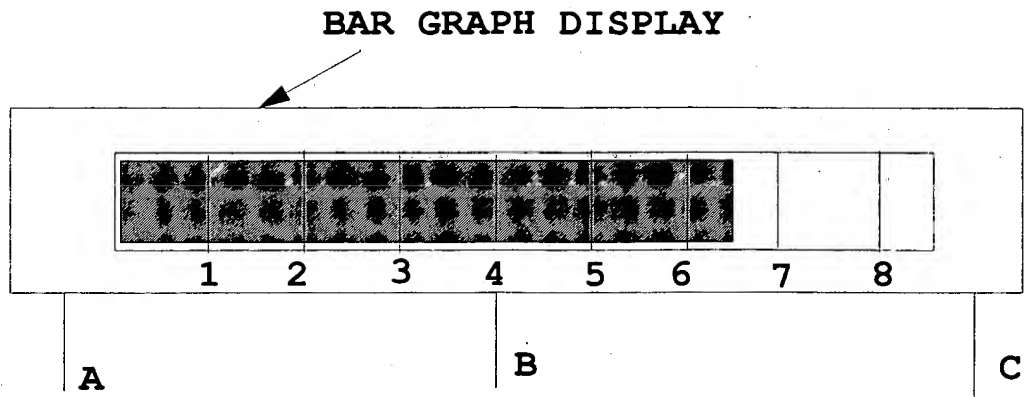
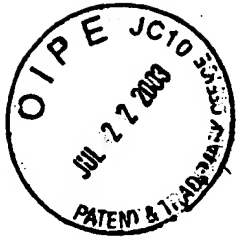


FIGURE 8

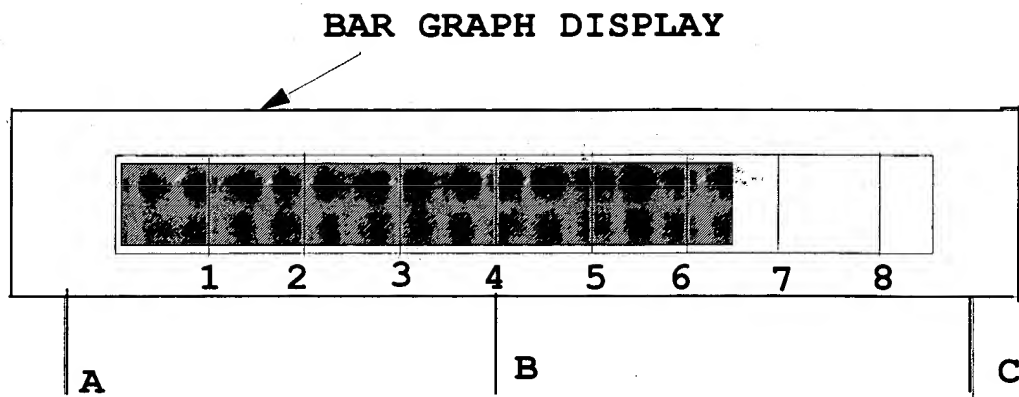


FIGURE 8

